


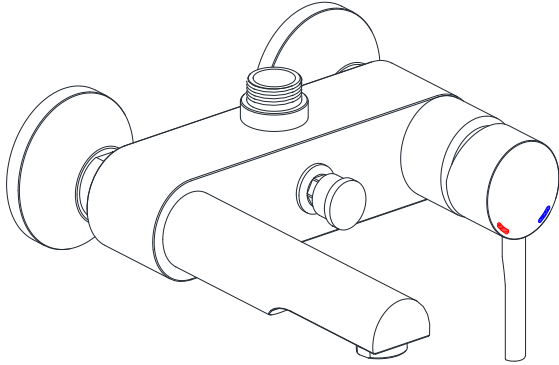


Single Lever Wall Mixer with Provision for Connection to Exposed Shower Pipe




* Representative image

 Temp & water pressure Requirement.


	Working Pressure: 1~3 bar
	Required Temperature: 5-65°C

Country wise leg adjustment.

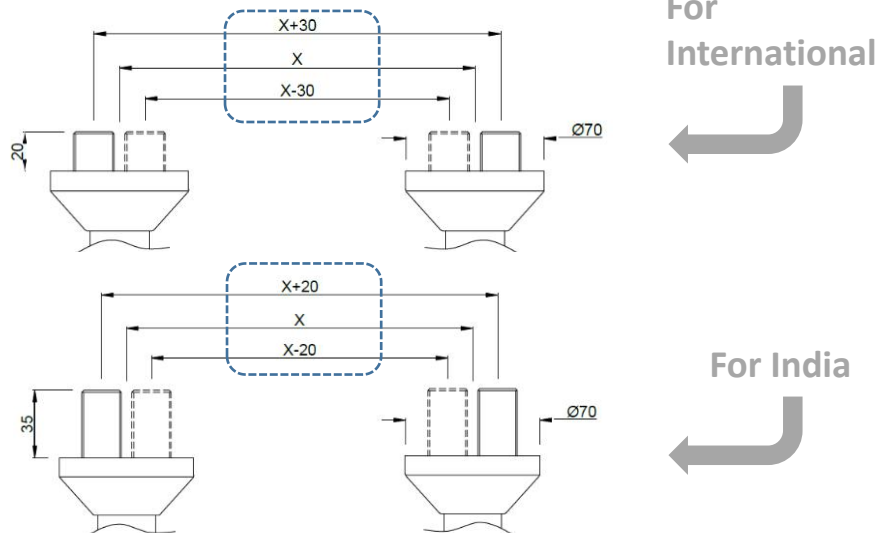


- **Working Pressure:-**The water pressure should be Between 1 and 3 bar for proper functioning.
- **Required Temperature:-** The water temperature within the range of 5-65° for safe & effective use.
- **Note:-** These are recommended values for achieving conventional /Optimum output.





Note: THIS INSTALLATION MANUAL CAN BE REFERRED FOR ALL SINGLE LEVER WALL MIXER WITH PROVISION CONNECTION TO EXPOSED SHOWER PIPE.

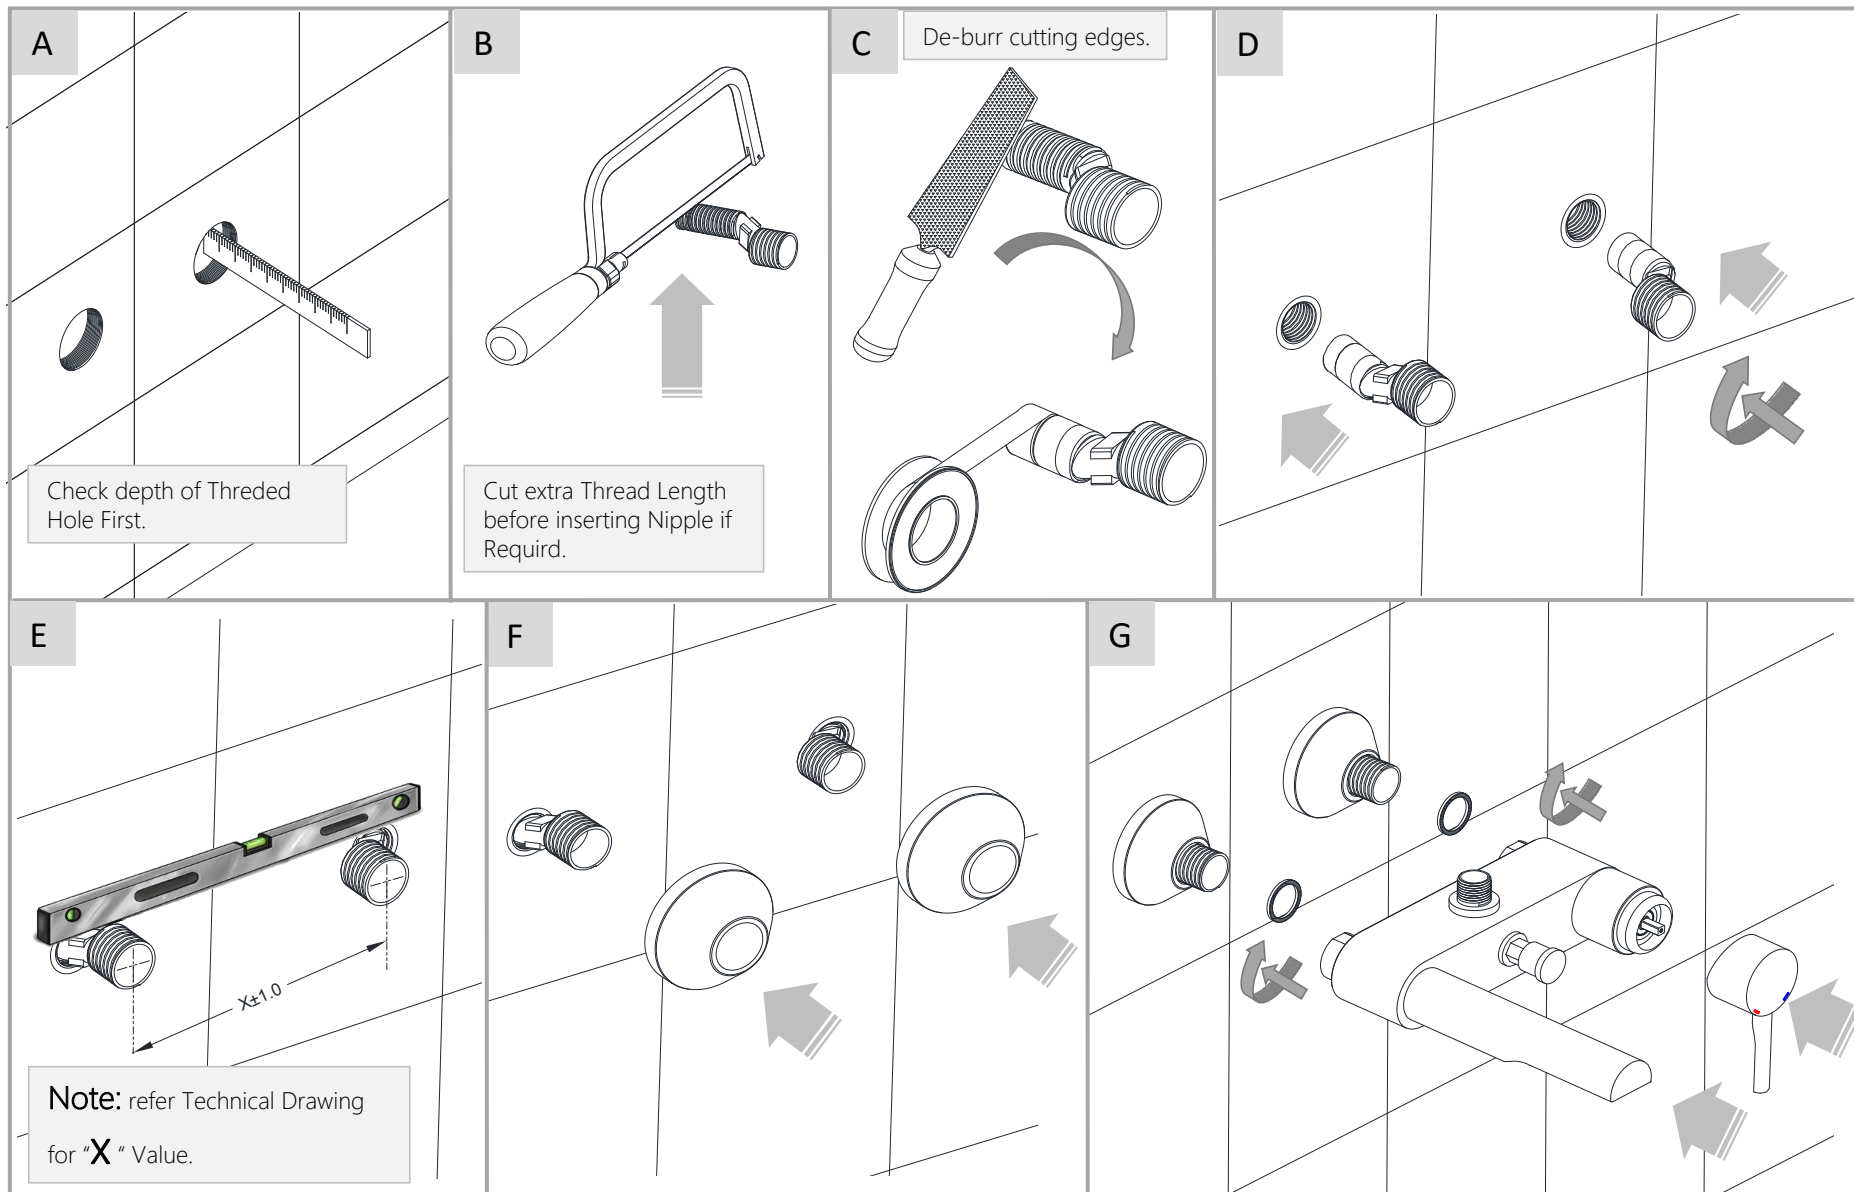


Note: THIS INSTALLATION MANUAL CAN BE REFFERED FOR ALL SINGLE LEVER WALL MIXER WITH PROVISION CONNECTION TO EXPOSED SHOWER PIPE.

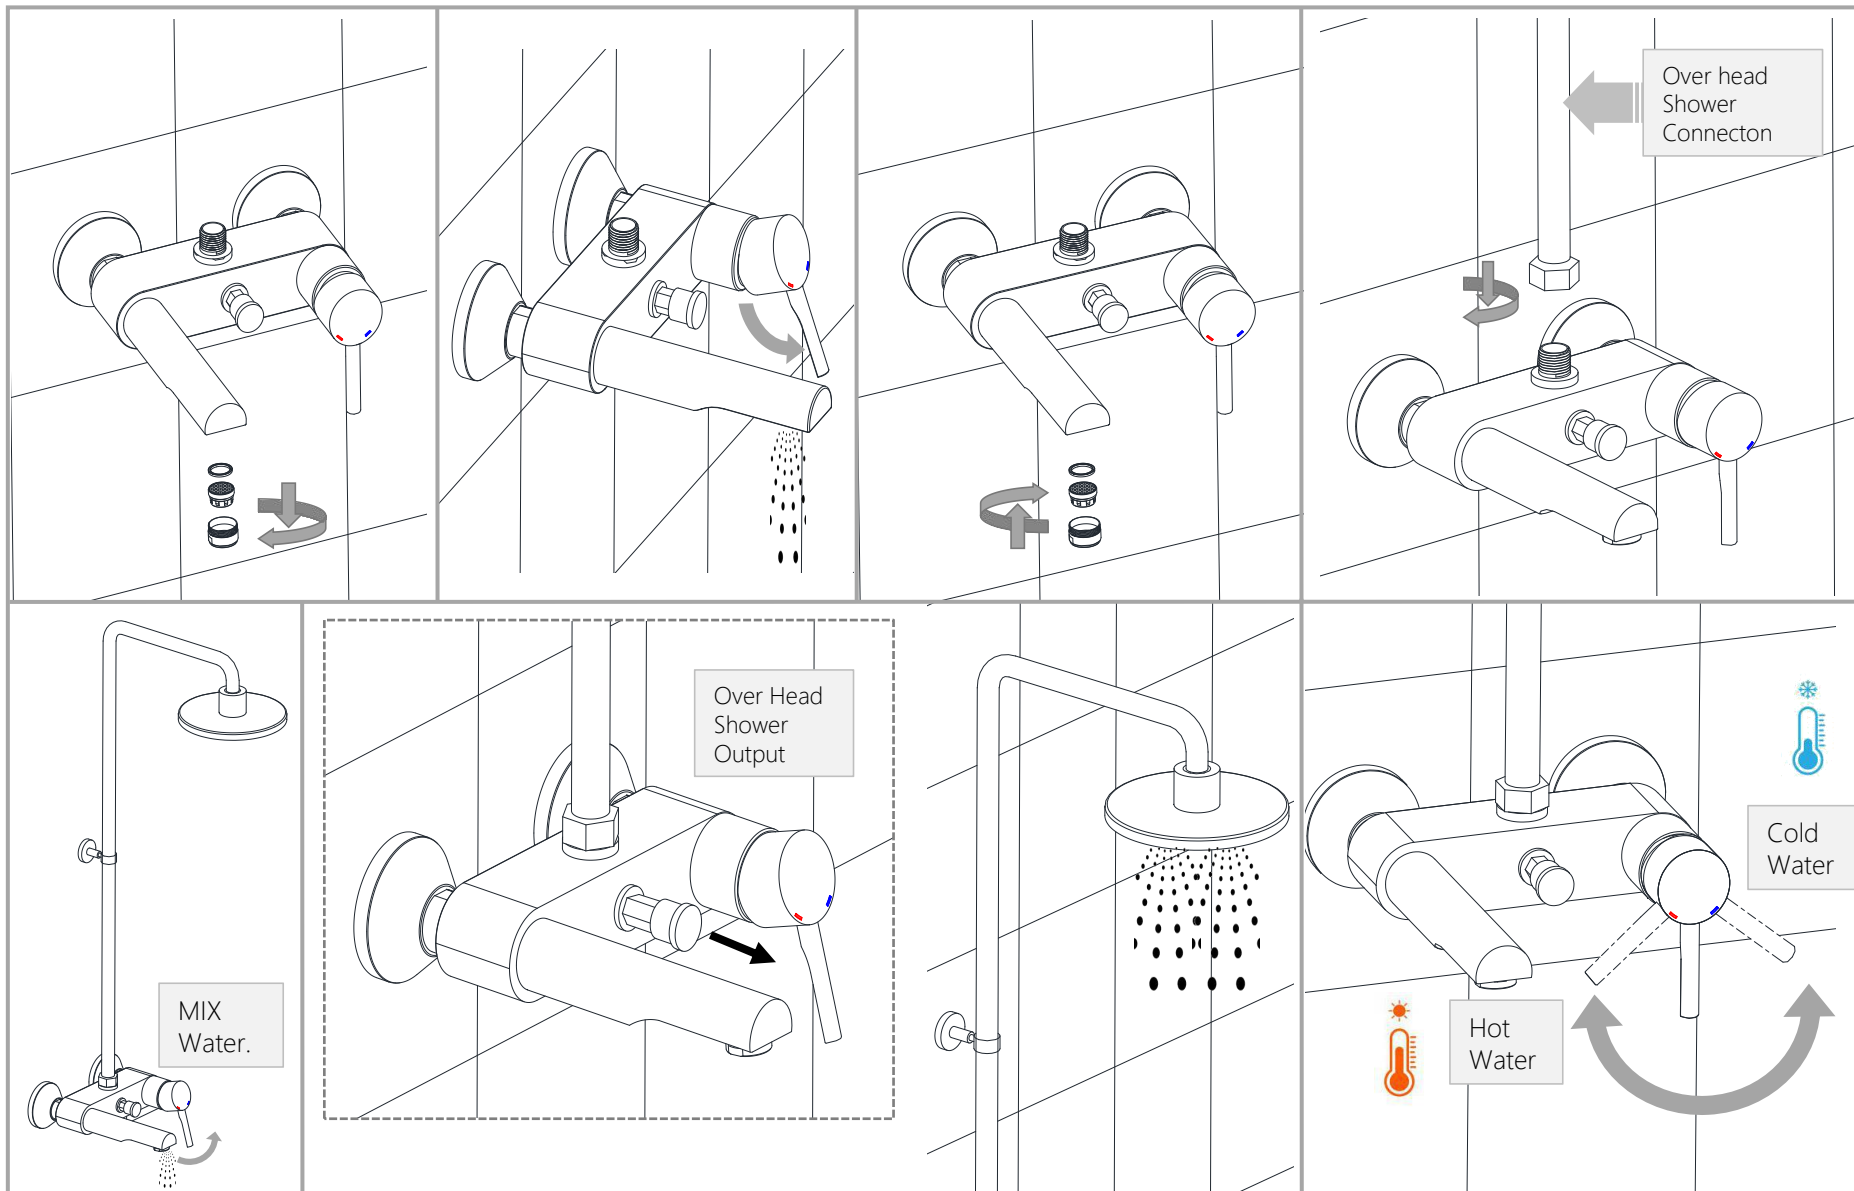

Note: THIS INSTALLATION MANUAL CAN BE REFERRED FOR ALL SINGLE LEVER WALL MIXER WITH PROVISION CONNECTION TO EXPOSED SHOWER PIPE.

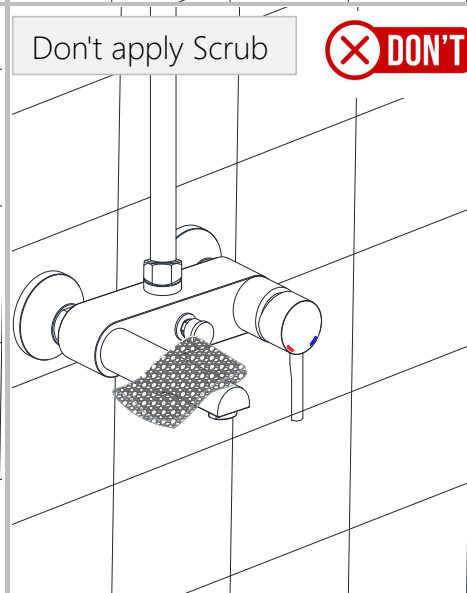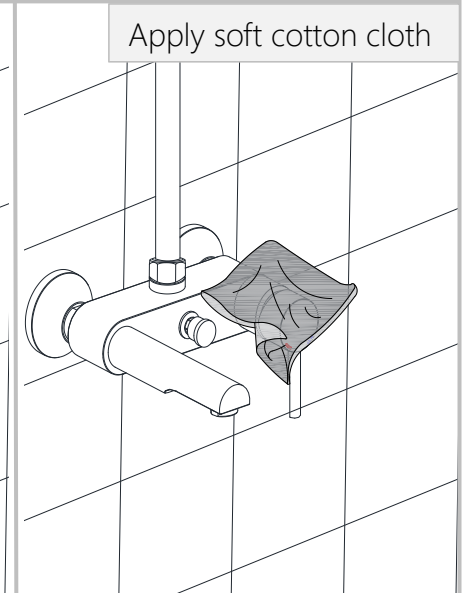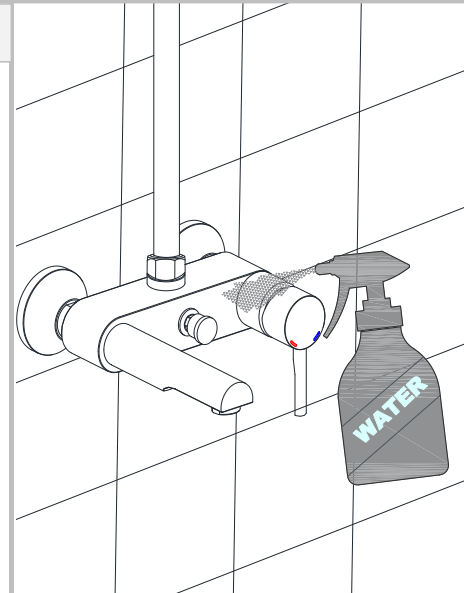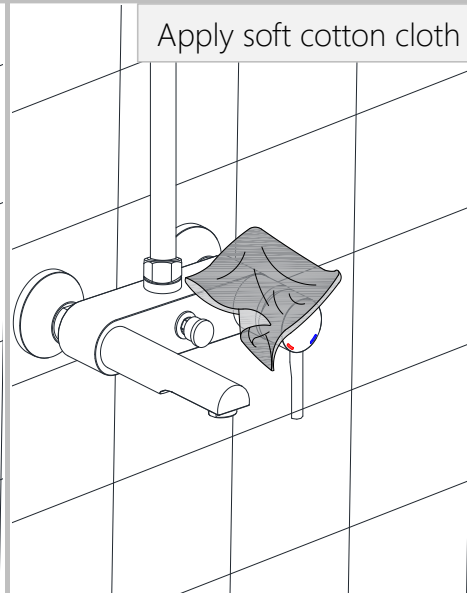

Steps & Cleaning agents requirements for Cleaning.

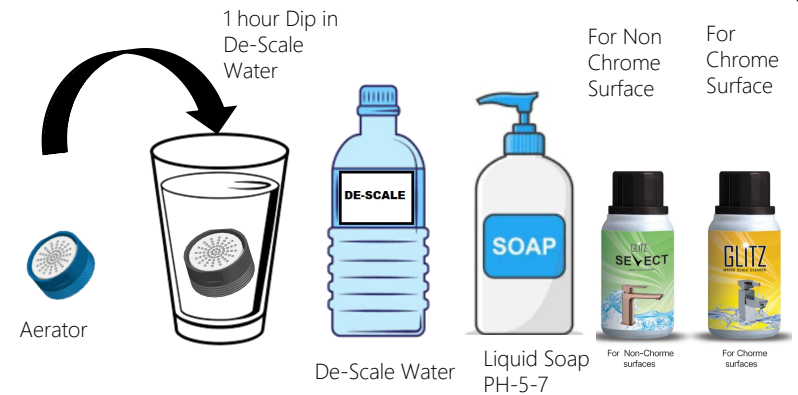

Recommended Cleaning:- Twice a week.

Note: THIS INSTALLATION MANUAL CAN BE REFERRED FOR ALL SINGLE LEVER WALL MIXER WITH PROVISION CONNECTION TO EXPOSED SHOWER PIPE.