




## Exposed Part Kit of Concealed Stop Cock & Flush Cock

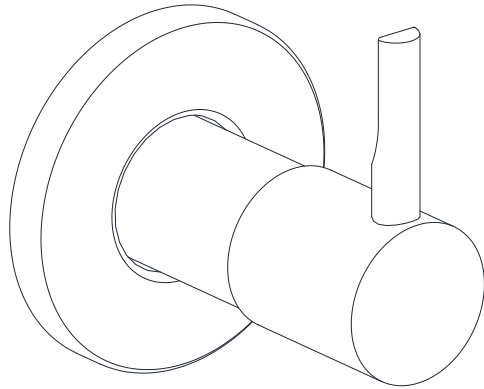

\* Representative image

## Temp & water pressure Requirement.




Working Pressure: 1~3 bar




Required Temperature: 5-65°C

- **Working Pressure:-**The water pressure should be Between 1 and 3 bar for proper functioning.
- **Required Temperature:-** The water temperature within the range of 5-65° for safe & effective use.
- **Note:-** These are recommended values for achieving conventional /Optimum output.

## HOW TO INSTALL







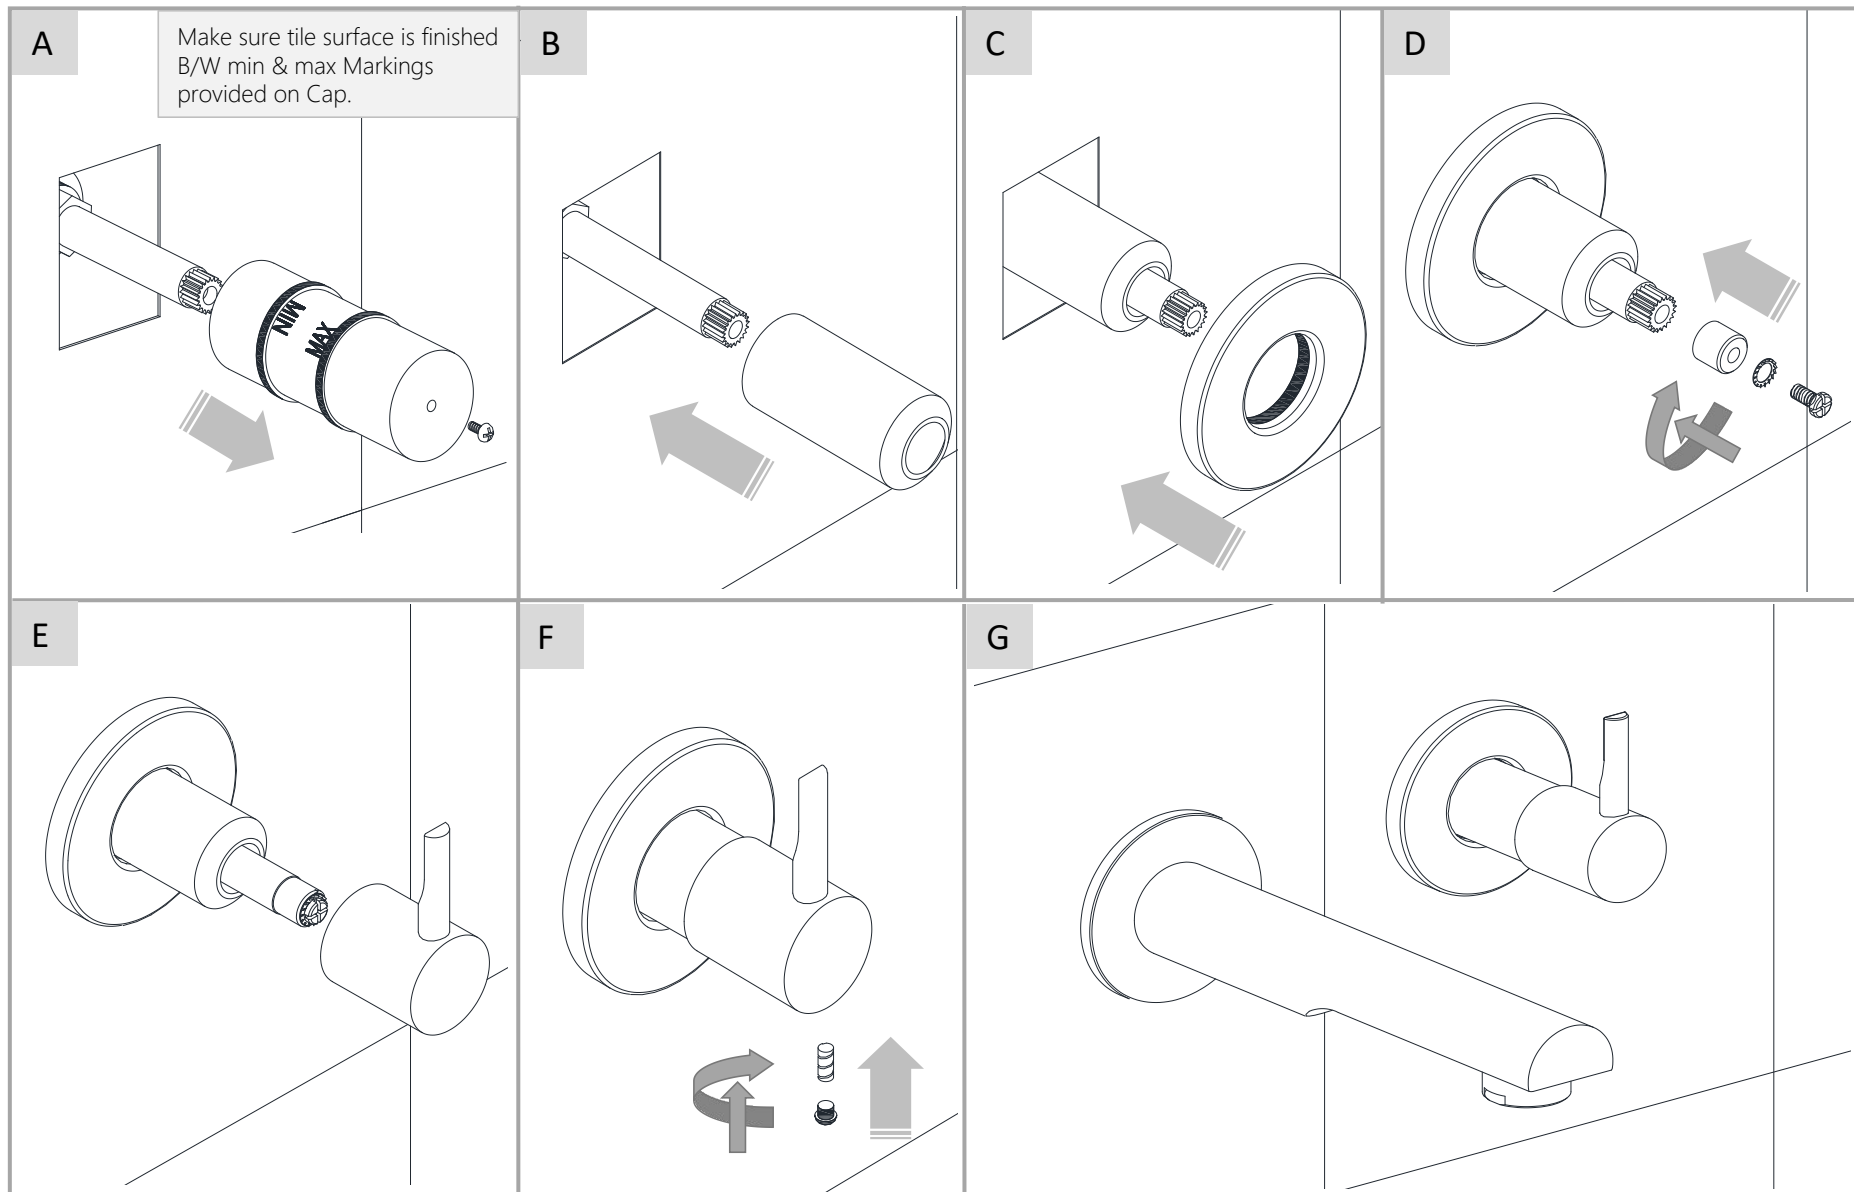


Note: THIS INSTALLATION MANUAL CAN BE REFERRED FOR ALL EXPOSED PART KIT OF CONCEALED STOP COCK & FLUSH COCK.

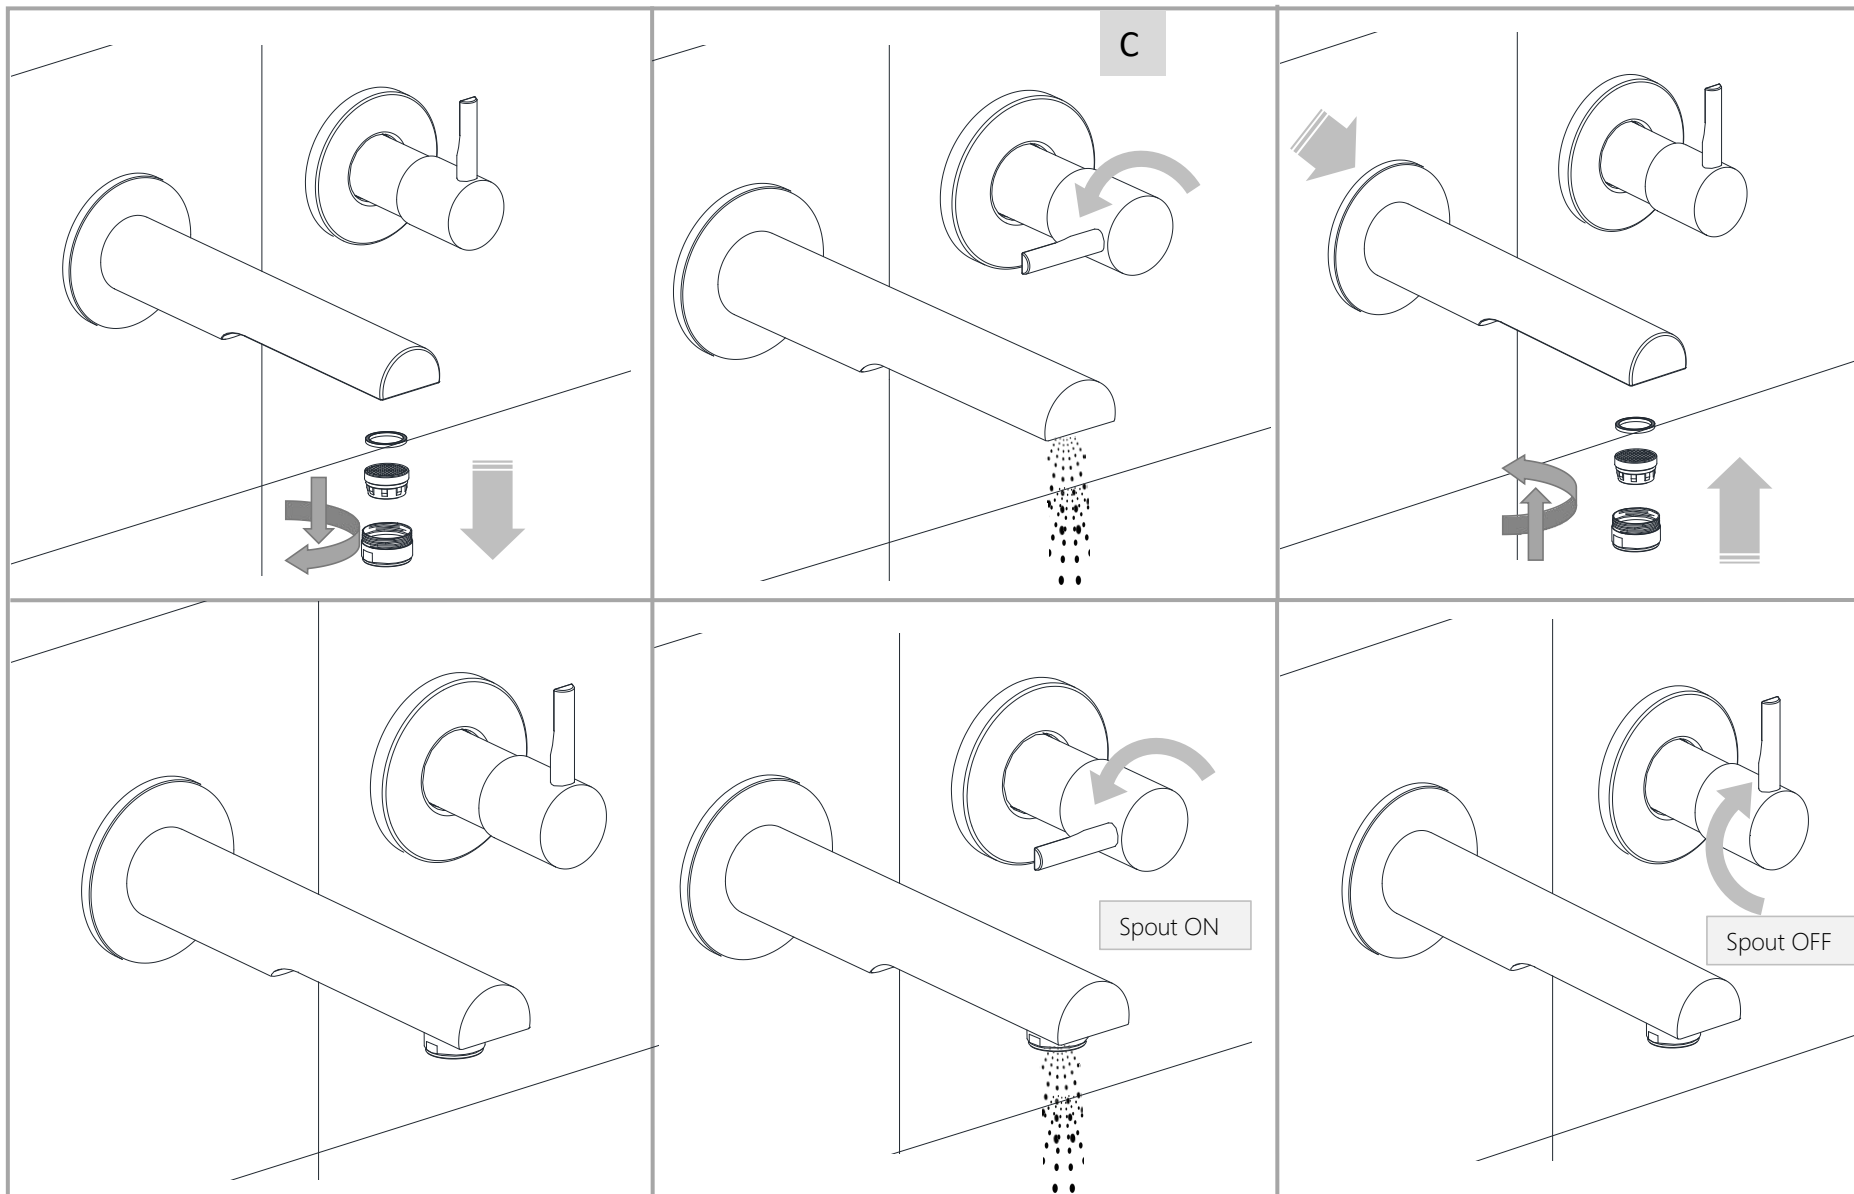

Note: THIS INSTALLATION MANUAL CAN BE REFERRED FOR ALL EXPOSED PART KIT OF CONCEALED STOP COCK & FLUSH COCK.

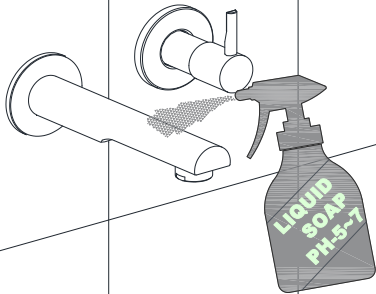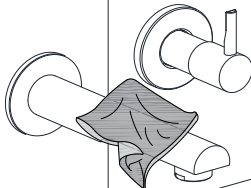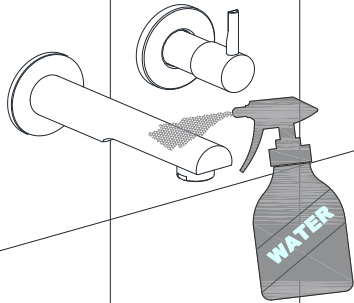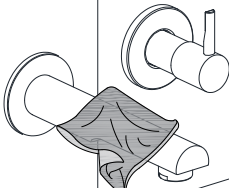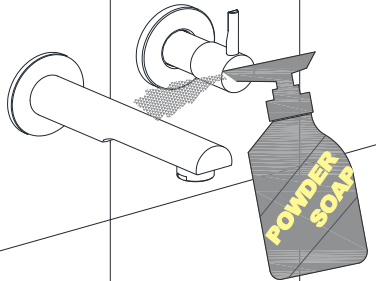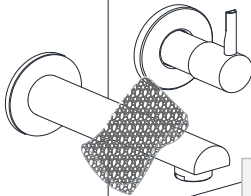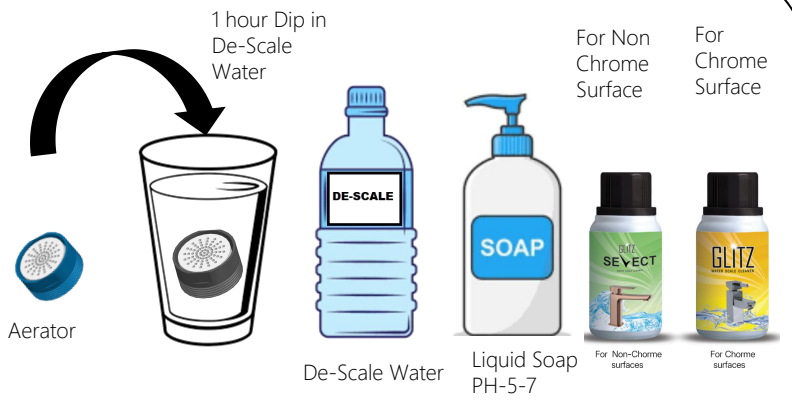

|                                                                                                                                                                                |                                                                                                                                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |                                                                                                                    |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------|
|  <p><b>LIQUID SOAP PH-5-7</b></p> <p><b>Note:</b> Apply liquid soap pH-B/W 5~7 or Glitz .</p> |  <p>Apply soft cotton cloth</p>                  |  <p><b>WATER</b></p>                                                                                                                                                                                                                                                                                                                                                                       |  <p>Apply soft cotton cloth</p> |
| <p><b>❌ DON'T</b></p>  <p><b>POWDER SOAP</b></p>                                             | <p><b>❌ DON'T</b></p>  <p>Don't apply Scrub</p> | <p><u>Steps &amp; Cleaning agents requirements for Cleaning.</u></p> <div data-bbox="1058 815 1964 1309">  <p>1 hour Dip in De-Scale Water</p> <p>Aerator</p> <p>De-Scale Water</p> <p>Liquid Soap PH-5-7</p> <p>For Non-Chrome Surface</p> <p>For Chrome Surface</p> <p>For Non-Chrome surfaces</p> <p>For Chrome surfaces</p> <p><b>RECOMMENDED CLEANING:- Twice a week.</b></p> </div> |                                                                                                                    |

**Note:** THIS INSTALLATION MANUAL CAN BE REFERRED FOR ALL EXPOSED PART KIT OF CONCEALED STOP COCK & FLUSH COCK.