
PRODUCT INFORMATION






Conventional Output.

Note: Above are the recommended values for getting

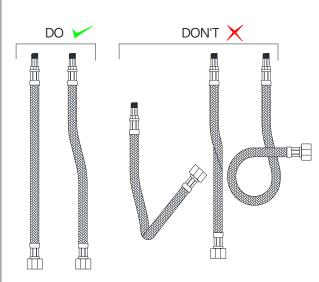


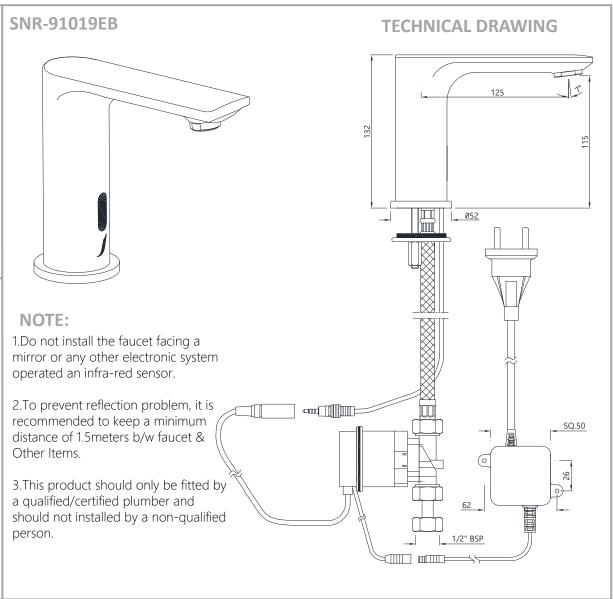

Note: This Installation method can be referred for SNR-CHR-91017EB, Technical drawing will be different for SNR-CHR-91017EB.


HOW TO INSTALL



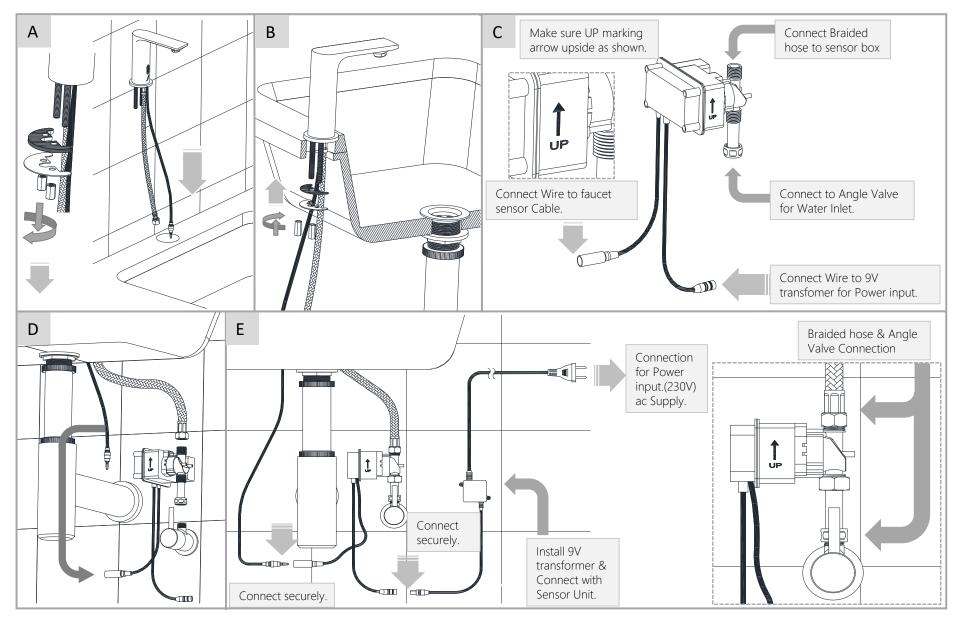

CONNECTION'S , OPERATE & SENSOR SET-UP



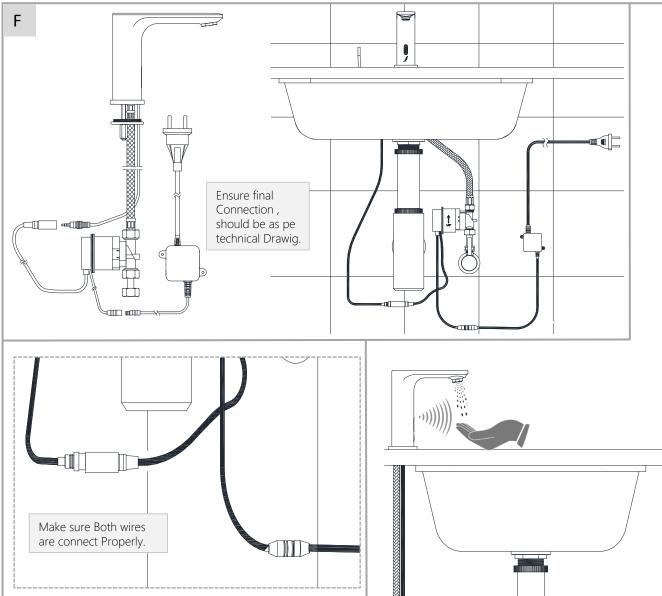

SETTING OF SENSOR RANGE BY Hand Gesture

IMORTANT: If needed, setting adjustment can be done by Hand Gesture

SETTING OF SENSOR RANGE and Valve Shut off Time BY Hand Gesture

Step1 - Use a plain white sheet 15X15 cm and kept around 5 cm in front from sensor and contentiously kept up to desired exit time as mention below steps

Step2 - Red LED blink and Water start Dispensing.

Step 3 - After 12-13 Seconds water automatic stop (Security Time)

Initiate Configuration Mode

Step 4 - After 10 seconds of Step-3 RED Led Glow if we want to increase range >15-22 cm, remove Paper from Sensor. And exit (Total Time 22-25 seconds)

Step 4a - After 10 seconds again RED LED Glow if we want to set shut off valve time 4-5 seconds and remove paper from Sensor. And Exit (Total Time 35-37 seconds)

Step4b - After further 10 seconds again RED LED Glow and here if we remove paper its go to Factory Default Range (10cm - 15cm). (Total White Paper Kept at Sensor = 42-45 seconds)

Step4c - After further 10 seconds again RED LED Glow and here if we remove paper its go to Factory Default Shut off valve time (2-3 sec.). (Total White Paper Kept at Sensor = 42-45 seconds)

CLEANING INSTRUCTIONS



