










INSTALLATION GUIDE


NOTE: THIS INSTALLATION SHEET CAN BE REFERRED FOR Two Concealed Stop Cocks with Basin Spout (Composite One Piece Body)

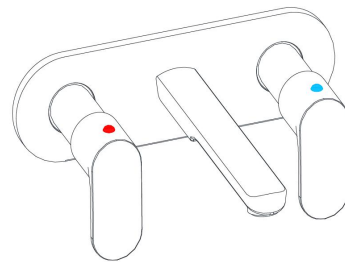



Requirements:-

- ◆ Screw driver ,Pencil for marking,Measuring tape,Teflon Tape,leveler.
- ◆ Angular stop cock live connection.
- ◆ Wrench for fitting & tightening.

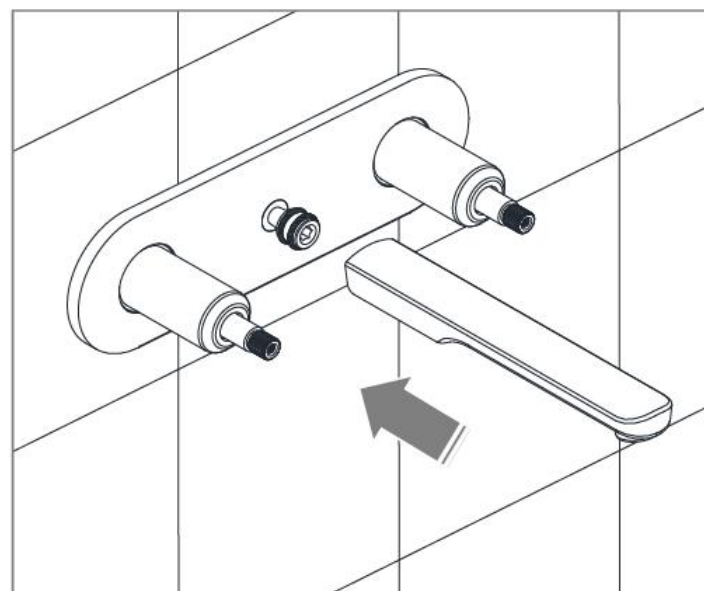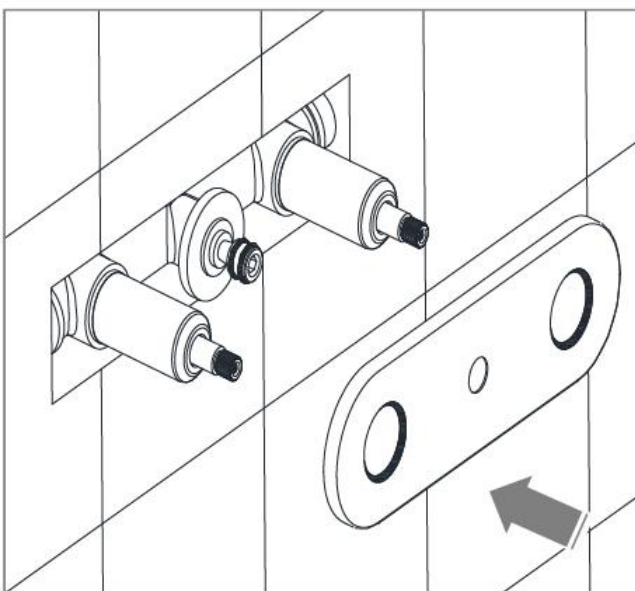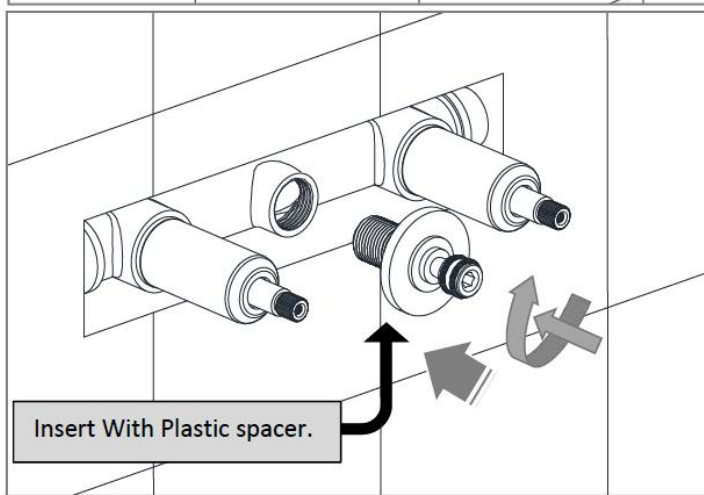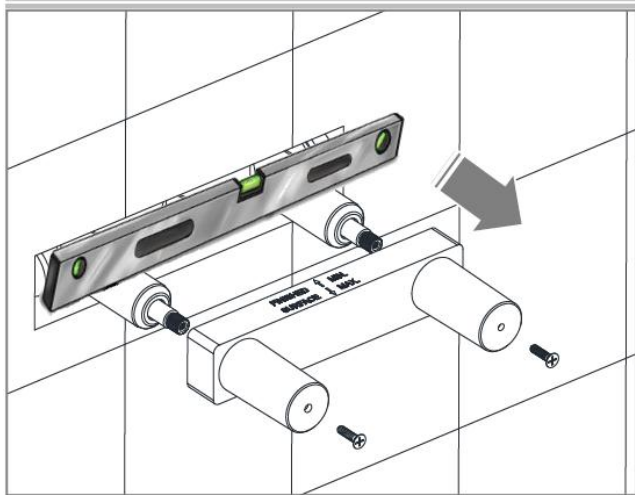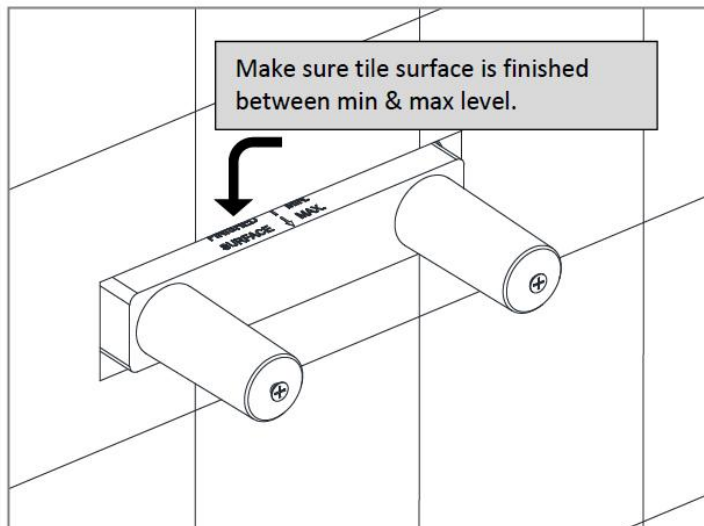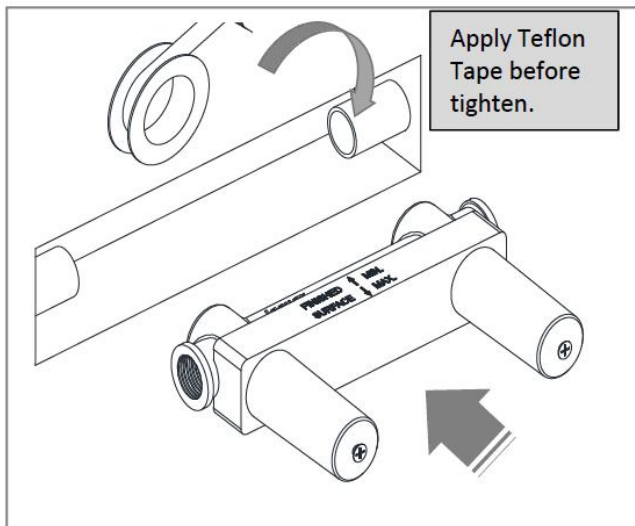

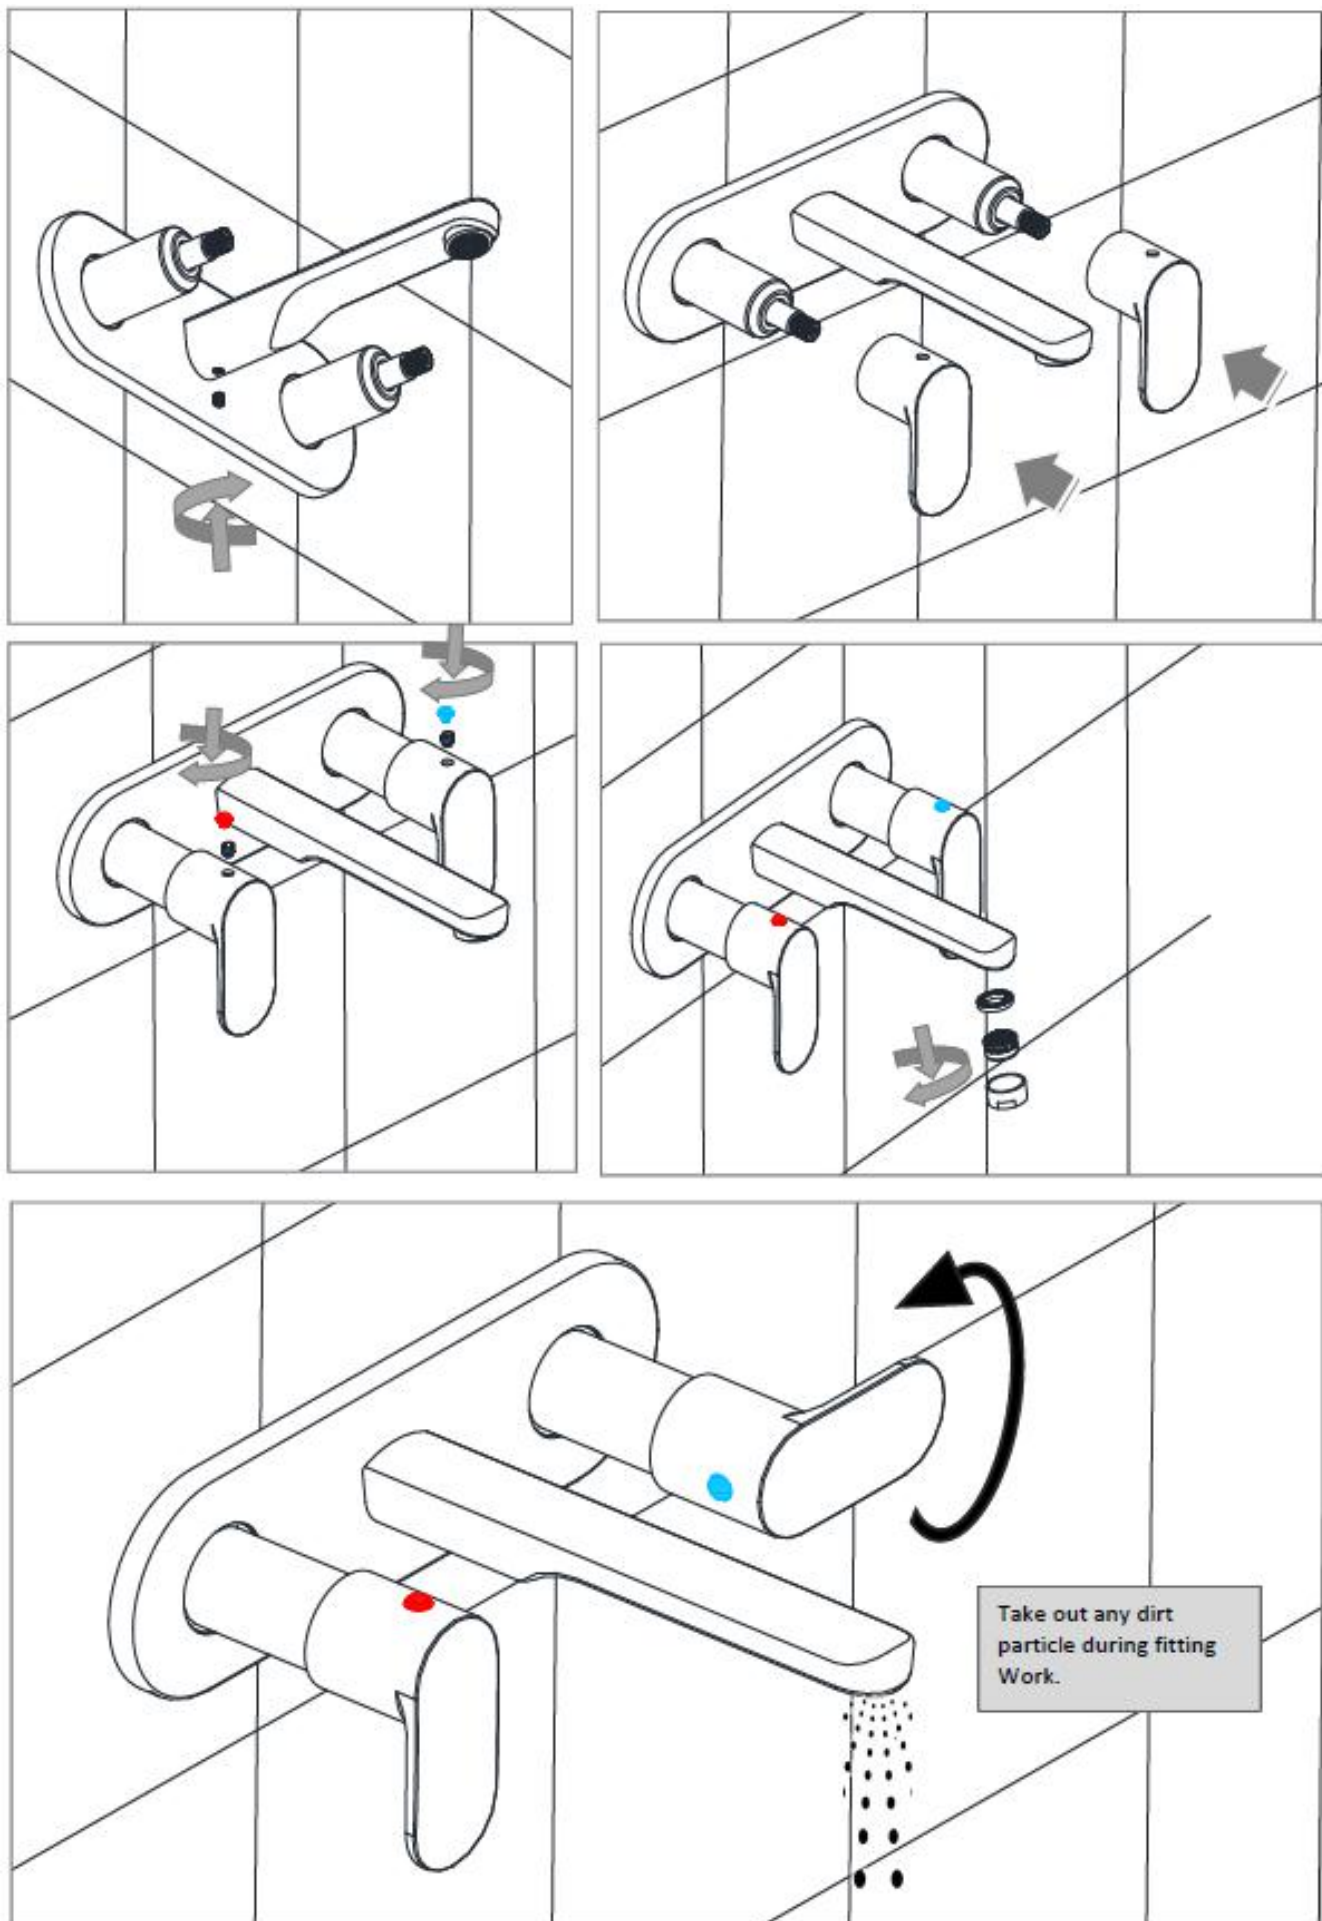

NOTE: THIS INSTALLATION SHEET CAN BE REFERRED FOR Two Concealed Stop Cocks with Basin Spout (Composite One Piece Body)

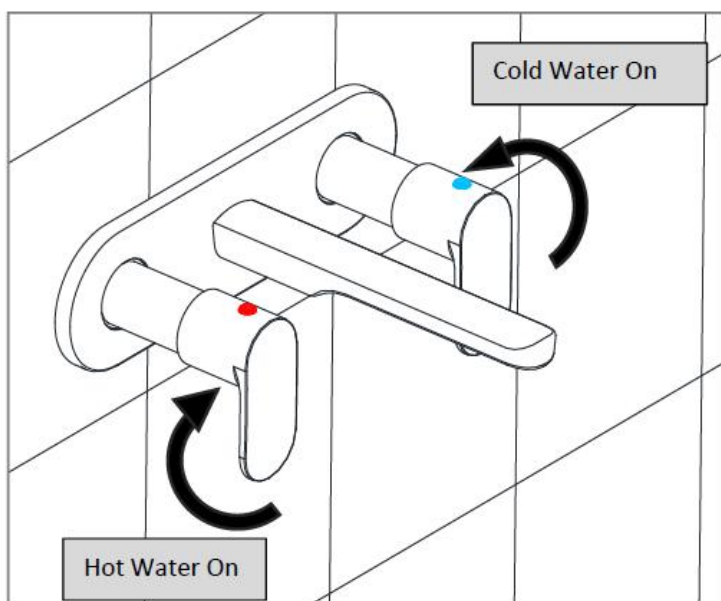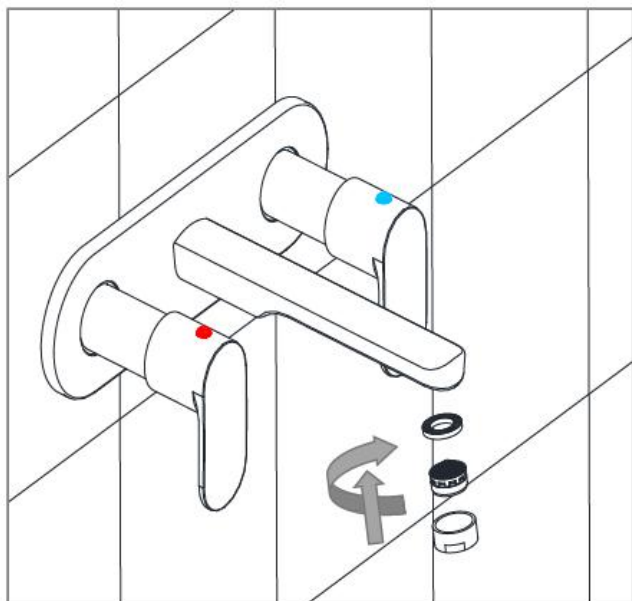

Correct Cleaning Steps:

1. Apply Liquid Soap (pH ~7):

Use a mild liquid soap (pH 5-7) or Glitz solution with a neutral water.

Spray it gently on the Outer surface of Product.

2. Use a Soft Cotton Cloth:

Wipe the Product with a soft cotton cloth to remove dirt, stains, or water marks.

This prevents scratches and keeps the surface shiny.

3. Rinse with Water:

Spray clean water on the fitting after wiping with soap. This helps remove any soap residue.

4. Final Wipe with Soft Cotton Cloth:

Again, wipe with a soft cotton cloth to dry the fitting. This ensures no water spots are left.

✗ Don'ts (Avoid These):


Don't use Powder Soap:

It can be abrasive and scratch the fitting surface.

Don't use Scrubbing Pads:

Scrubbing with rough materials can damage the finish and reduce shine.

Steps & Cleaning agents requirements for

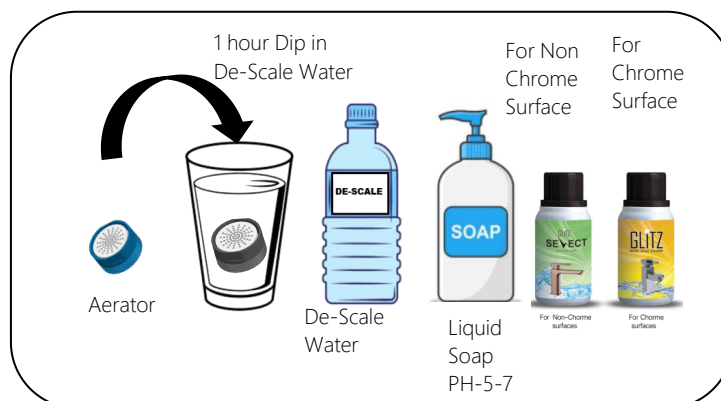

NOTE: THIS INSTALLATION SHEET CAN BE REFERRED FOR Two Concealed Stop Cocks with Basin Spout (Composite One Piece Body)