



INSTALLATION GUIDE


Requirements:-

- ◆ Wall plug ,screw (Included)
- ◆ Screw Driver, drill machine.
- ◆ Soft Hammer for inserting wall plug.

Note: THIS INSTALLATION MANUAL CAN BE REFERRED FOR TOILET PAPER/ROLL HOLDER RECESSED TYPES & SOAP DISH HOLDER RECESSED TYPE.



* Representative image

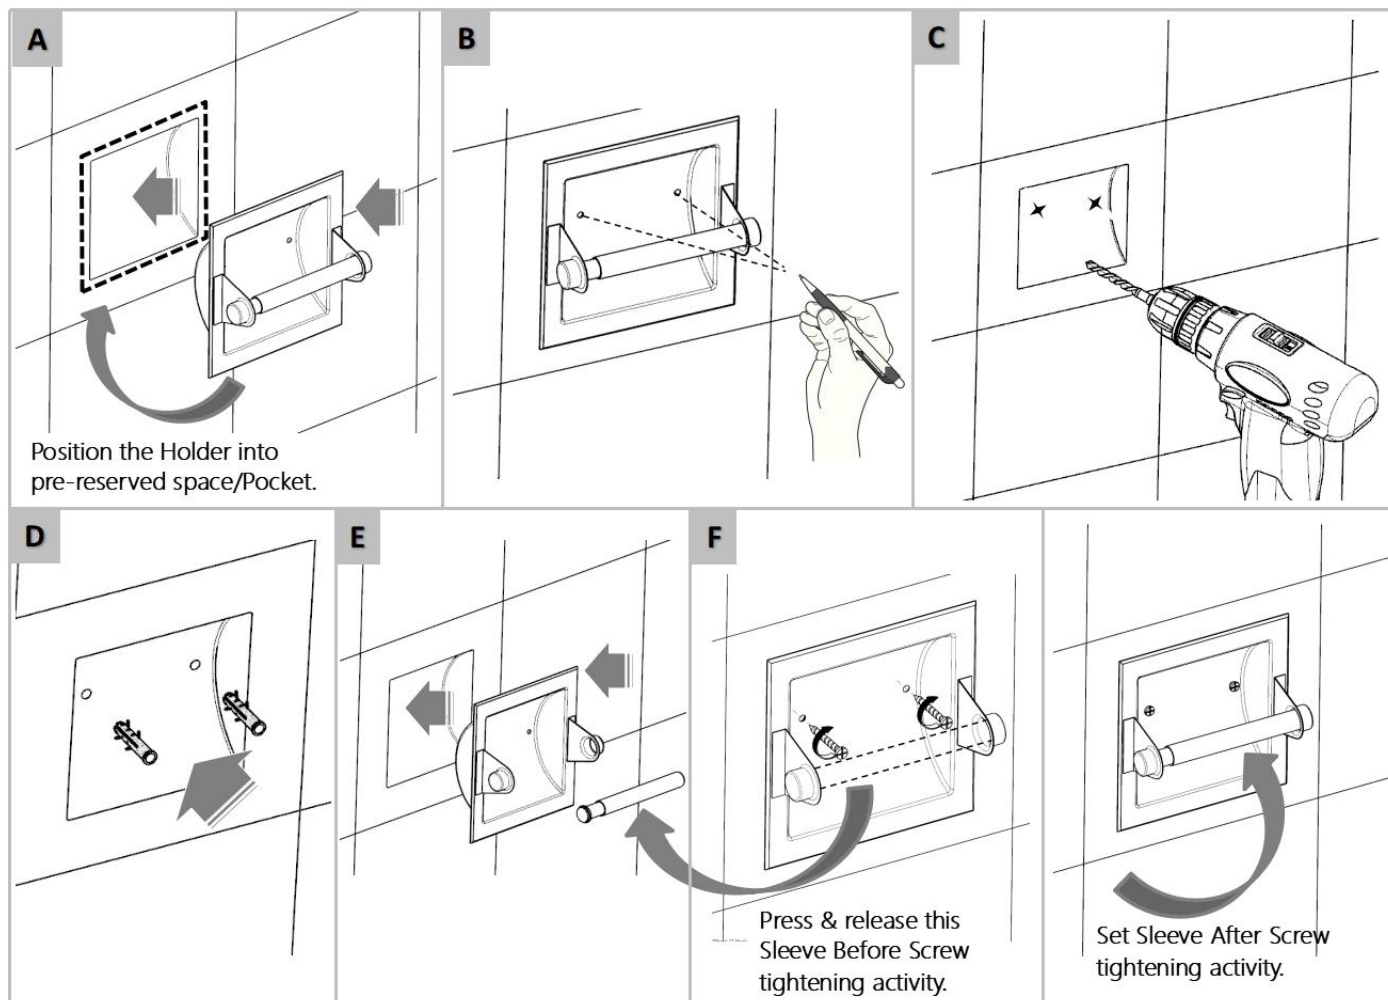

Safety Tips:-

- ◆ Tighten any loose screws or hardware.
- ◆ Use proper eyewear while perform drilling work.
- ◆ Place the Item at Reachable Height.
- ◆ Use soft Hammer to avoid damage.



Correct Cleaning Steps:

1. Apply Liquid Soap (pH ~7):

Use a mild liquid soap (pH 5-7) or Glitz solution with a neutral water.

Spray it gently on the Outer surface of Product.

2. Use a Soft Cotton Cloth:

Wipe the Product with a soft cotton cloth to remove dirt, stains, or water marks.

This prevents scratches and keeps the surface shiny.

3. Rinse with Water:

Spray clean water on the fitting after wiping with soap.

This helps remove any soap residue.

4. Final Wipe with Soft Cotton Cloth:

Again, wipe with a soft cotton cloth to dry the fitting.

This ensures no water spots are left.

✗ Don'ts (Avoid These):

Don't use Powder Soap:

It can be abrasive and scratch the fitting surface.

Don't use Scrubbing Pads:

Scrubbing with rough materials can damage the finish and reduce shine.

For Non
Chrome
Surface



For
Chrome
Surface



Recommended Cleaning:-
Twice in a Week.

Note: THIS INSTALLATION MANUAL CAN BE REFERRED FOR TOILET PAPER/ROLL HOLDER RECESSED TYPES & SOAP DISH HOLDER RECESSED TYPE.